

Aotoro®

TS Rectangle type 方型

INSTRUCTION MANUAL

使用说明书

PROXIMITY SWITCH
接近开关



A2302-03

Ordering information 订购信息

TS18-5DN2U


Detecting orientation 检测方向		Standard type 标准检测
	U	Upper detecting type 侧向检测
Output 输出构成	N	NPN NO 3-Wire
	N2	NPN NC 3-Wire
	P	PNP NO 3-Wire
	P2	PNP NC 3-Wire
	O	NO 2-Wire 二线
	C	NC 2-Wire 二线
	N3	NPN NO+NC
Supply 电压	D	DC Type
	A	AC Type
Detecting distance 检测距离	4	4mm
	5	5mm
	7	7mm
	10	10mm
	15	20mm
Serial number 设计序号	Side length 探测头边长(mm)	
Appearance 外型分类	R	Cylindrical 圆柱型
	S	Rectangle 方型
	P	Flat 平面型
	U	Groove shape 槽型
Proximity switch 接近开关	T	Inductive 电感式
	C	Capacitive 电容式
	S	HALL 霍尔式

Specification 规格


Model 型号	DC NPN	TS12-4DN TS12-4DN2	TS12-4DNU TS12-4DN2U	TS18-5DN TS18-5DN2	TS25-7DN TS25-7DN2	TS30-10DN TS30-10DN2
	DC PNP	TS12-4DP TS12-4DP2	TS12-4DPU TS12-4DP2U	TS18-5DP TS18-5DP2	TS25-7DP TS25-7DP2	TS30-10DP TS30-10DP2
	DC二线 2-wire	TS12-4DO TS12-4DC	TS12-4DOU TS12-4DCU	TS18-5DO TS18-5DC	TS25-7DO TS25-7DC	TS30-10DO TS30-10DC
	AC二线 2-wire				TS25-7AO TS25-7AC	TS30-10AO TS30-10AC
Detecting distance 探测距离		4mm ± 10%	4mm ± 10%	5mm ± 10%	7mm ± 10%	10mm ± 10%
Setting distance 设定距离		0 to 2.8mm	0 to 2.8mm	0 to 3.5mm	0 to 4.9mm	0 to 7mm
Standard Detecting target 标准探测体		Iron 12x12x1mm(铁)		Iron 18x18x1mm(铁)	Iron 25x25x1mm(铁)	Iron 30x30x1mm(铁)
Hysteresis 回差		Max.10% of detecting distance(检测距离的10%以下)				
Power supply 电源电压		DC 3-wire type(三线型): 12-24VDC(5-30VDC) DC 2-wire type(二线型): 12-30VDC AC 2-wire type(二线型): 90-250VAC				
Current consumption 静态电流		DC 3-wire type(三线型): Max.12mA DC 2-wire type(二线型): Max.0.9mA AC 2-wire type(二线型): Max.2.2mA				
Response frequency 频率	DC	400HZ		300HZ	250HZ	200HZ
	AC	20HZ				
Residual voltage 残留电压		DC 3-wire type(三线型): Max.1.5V DC 2-wire type(二线型): Max.6V AC 2-wire type(二线型): Max.10V				
Control output 控制输出		DC 3-wire type(三线型): Max.200mA DC 2-wire type(二线型): Max.100mA AC 2-wire type(二线型): Max.200mA				
Protection circuit 电路保护		Reverse polarity protection 反极性保护, Surge absorber浪涌保护, Short circuit protection短路保护: DC3-wire type				
Indicator 显示灯		Power supply indicator 电源指示: Green LED, Operating indicator 动作指示: Red LED				
Insulation resistance 绝缘阻抗		Min.50MΩ (500VDC)				
Dielectric strength 耐电压		1500VAC 50/60HZ for 1 minute				
Vibration 抗振动		1 mm amplitude at frequency of 10 to55HZ in each of X, Y, Z directions for 2 hours				
Shock 抗冲击		500m/s ² (50G) X, Y, Z directions for 3times				
Operating temperature 使用环境温度		-25 to +70℃ (non-freezing condition 不结冰)				
Ambient humidity 使用环境湿度		35 to 95% RH				
Protection 保护结构		IP67 (IEC Specification)				
Material 材料		Case: ABS 壳体 ABS				

Dimensions 尺寸(unit:mm)


TS12-□

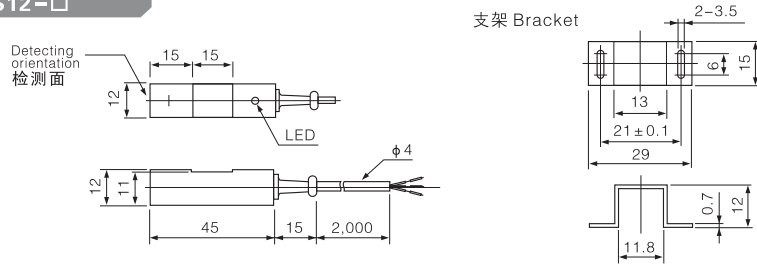


TS12-□U

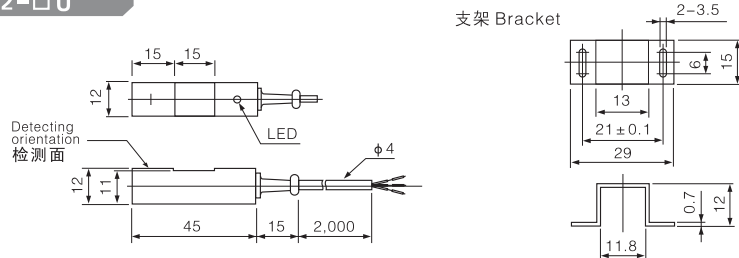


TS18

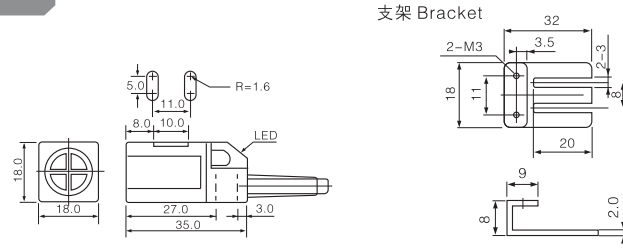

TS25


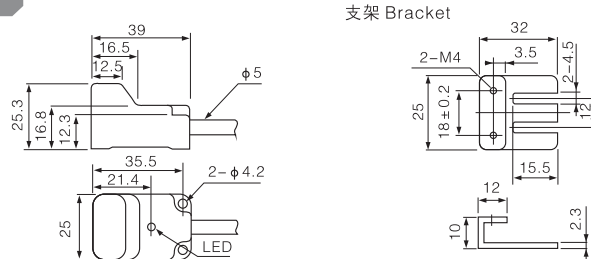


TS30

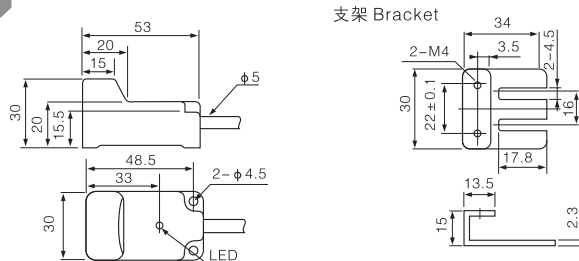


Control output diagram 控制输出图


● DC 3-wire(三线型)

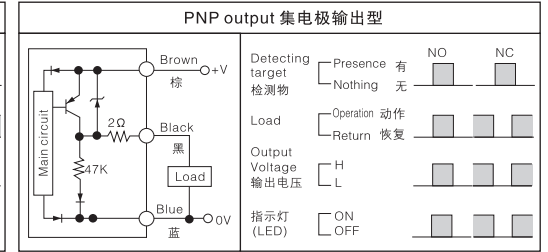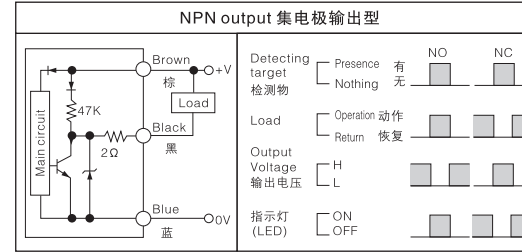

● AC 2-wire(二线型)

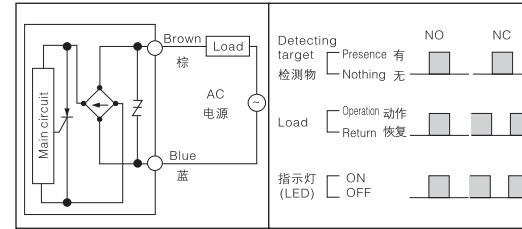

● DC 2-wire(二线型)

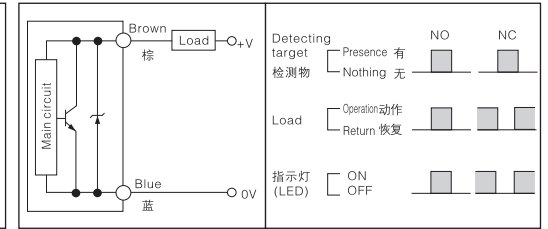

Precautions in using the product 使用注意事项

NOTE 注意

Be sure to follow the safety precautions below for adder safety

以下项目在安全确保方面非常重要,请务必遵守。

1. Do not use the sensor under the explosive or flammable gas environment.

请不要在具有可燃性、爆炸性气体的环境下使用。

2. Never disassemble, repair or tamper the product.

请勿拆卸、修理、改造本产品。

3. Keep the supply voltage within the specified area.

电源电压必须在额定值内。

4. use the load under the specified area.请使用额定值以下的负荷。

Caution for using 正确使用方法

1. Do not use the product under the following conditions.

请不要在以下的环境中使用。

(1) In the place of the direct sunlight.日光直射场所。

(2) In the place where humidity is high and condensation may occur.

湿度高或易结露场所。

(3) In the place of the corrosive gas exists.含腐蚀性气体场所。

(4) In the place where vibration or shock is directly transmitted to the product.振动或冲击能直接传送到传感器场所。

2. Connection and Mounting 连接和安装

(1) Be sure that before giving the power, the supply voltage is less than the maximum rated supply voltage.

通电前请确认供电电源电压小于最大允许电源电压。

(2) There are some cases where the sensors cable is unavoidably laid in a tube or duct together with a hightension or power line. This causes an induction, possibly resulting in malfunction or damage. In principal, the cable should be separately laid or shielded.

传感器导线和动力线或电力线装在同一配管中使用时,会受到干扰,有误动作甚至被损坏。原则上传感器导线必须单独放置或者被屏蔽。

(3) For extending wires, whose cross section is greater than 0.3sqmm and the length less than 100m.延长导线必须使用截面积0.3mm²以上、长度100m以下导线。

(4) Do not pull wire strongly.导线请勿用力拉扯。

(5) Excessive force (hitting by hammer, etc.) Should not be put on the sensors because it may damage its water-resistance. 安装传感器时,请勿使传感器受剧烈外力(如用锤击打等),这样就有可能破坏传感器防水保护性能。

3. Power supply 电源

When using a commercially available switching regulator, be sure to ground the FG(Frame Ground) terminals.

使用市场上销售的开关整流器时,请将FG (Frame Ground)端子接地。

4. Power supply reset time 电源重新调整时间

The sensors will begin sensing no later than 100ms after the power is turned on. If the load and the sensors connected to different power supply, the sensors must be always turned on first.从接通电源到传感器可正常进行检出的时间是100ms后再使用。负载和传感器接不同电源时,一定要先接通传感器的电源。

5. Turning off the power supply 电源关闭

When turning off the power, output pulse may be generated. We recommend turning off the power supply of the load or load line first.

电源关闭时,可能会出现输出脉冲,所以我们建议先关闭负载或负载线的电源。

6. AC 2-wire type & DC 2-wire type


交流二线和直流二线型

(1) The load must be connected otherwise internal components may be damaged. And the load can be connected to tother wire.

接线时需将负载串接到其中任意一根连接线,否则传感器会短路爆裂。

(2) In case of the load current is small: connect the bleeder resistor to load parallel. as following picture shows:

如果负载电流过小: 负载的残余电压会使传感器失灵, 请确保残余电压要小于启动电压, 可以安装一个与负载并联的分流电阻, 如图所示:

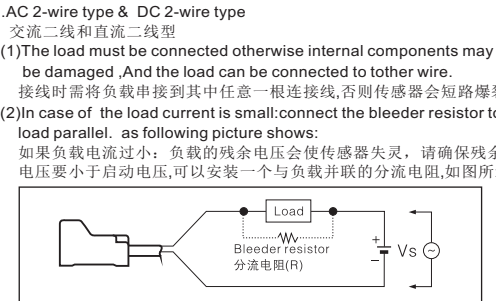

$R \leq \frac{V_s}{I_{off}}$ (k Ω)
Vs: power supply 电源
P: Bleeder resistor, number of W 分流电阻功率
 I_{off} : Min. operating current of proximity switch 接近开关的最小动作电流
 $P > \frac{V_s^2}{R}$ (mW)
 I_{off} : Return current of load 负载的恢复电流
※ 110VAC 50/60HZ, bleeder resistor over 20K, Min. 3W
220VAC 50/60HZ, bleeder resistor over 39K, Min. 5W

浙江欧迪龙电子科技有限公司

Zhejiang Aotero Electronic Technology CO., LTD

ADD: Lihuang Road 2188#, Liushi town, Yueqing

city, Zhejiang province . PRC 325604

浙江省乐清市柳市镇柳黄路2188号

TEL: 86-577-61758688 FAX: 86-577-62757002

Http://www.aotero.com E-mail: aotero@aotero.com